

# Emergency Response Quick Reference

## All 2000-2005 Honda and Acura Vehicles

### Recommended Procedures

#### Fire

- No unusual materials.
- Follow standard procedures.

#### Secure Vehicle

- Turn ignition off and remove key.
- If key cannot be reached, cut negative battery cable(s).
- Set parking brake.

#### Airbags

- See illustrations for airbag locations.
- Front and side airbags labeled above airbag locations. Side curtain airbags marked at top of front pillars and middle or rear pillars.
- Deactivation time = up to 3 min. after engine off or negative battery cable(s) cut.
- Temps. 320-356°F (160-180°C) can deploy airbags.

#### Occupant Extrication


- Observe cut zones.

#### Vehicle Removal


- Use flatbed truck if vehicle repairable.

### Key Components and Cut Zones


#### Coupes & Sedans

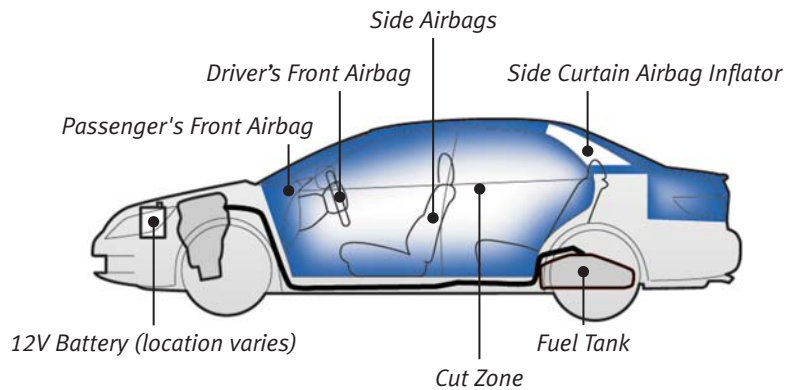

#### SUVs & Minivans

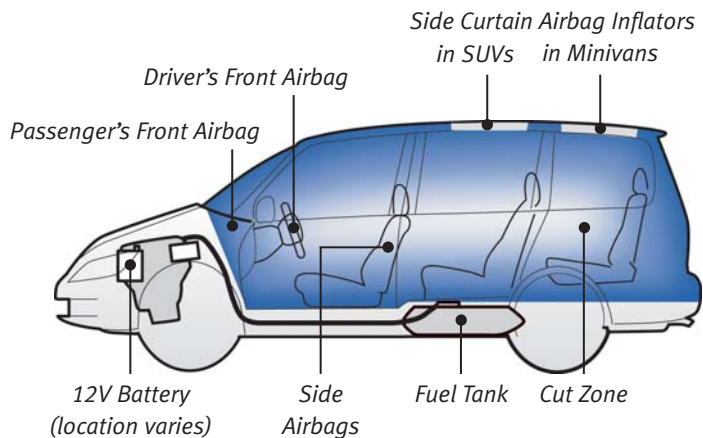

#### 2-Seat Vehicles\*

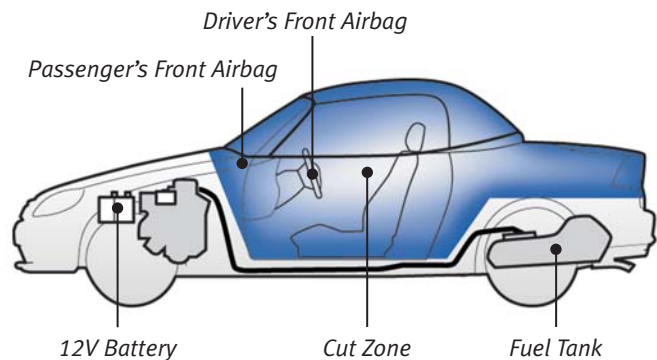

\*Honda S2000 illustrated. Engine, fuel tank and battery locations vary for Insight and Acura NSX.

# Emergency Response Quick Reference

## Honda Alternative Fuel Vehicles

### Recommended Procedures

Follow all recommendations on reverse of card plus the following:

#### High-Voltage Hazard


Contact with damaged high voltage (HV) battery module, motor, or cables can result in electric shock and death.

To stop electric current from flowing into HV cables:


- Turn ignition OFF.
- If key cannot be reached, cut negative 12V battery cables and remove main fuse (see diagram on top or inside fuse box cover).

### Key Hybrid Components and Cut Zones

#### Honda Insight Hybrid (2000-2005)

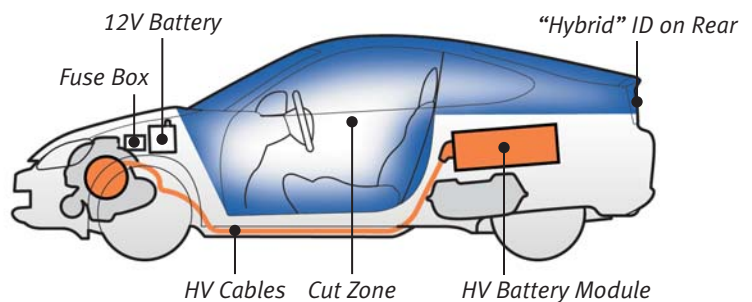

#### Civic & Accord Hybrids (2003-2005)

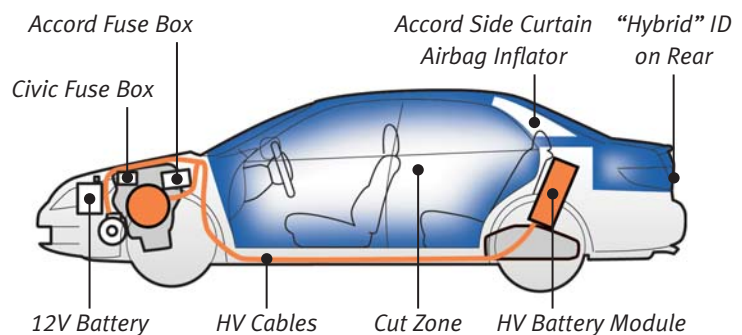

### Recommended Procedures


Follow all recommendations on reverse of card plus the following:

#### High Pressure Hazard

- Turn ignition OFF, or cut negative battery cables and remove the main fuse (see diagram on or inside fuse box cover).
- If key or engine compartment can't be reached, turn off red CNG manual shut-off valve. Engine stops in 1 minute; airbags still powered.
- If vehicle on fire, gas may vent out rear. Stay away from rear until fire completely extinguished.

### Key Compressed Natural Gas (CNG) Components

#### Civic GX (1998-2005)

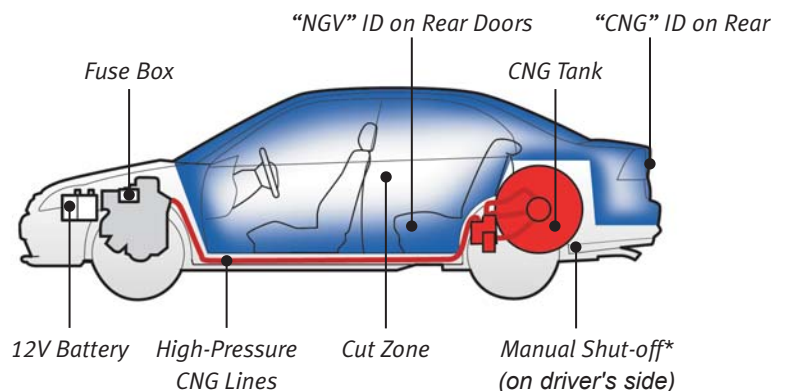

\*To access manual shut-off, reach between left rear tire and mud flap. Turn red handle to the right.